
 
 


















Original	Rechange
 Power	 Power
 AV	 AV / Input / RDS
 Mute	 Mute / Dimmer
 16:9	 Picture / Format
 Zoom	 Zoom / Size
 Subt.	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 EPG	 Guide / EPG / -/--
 7	 7
 8	 8

Original	Rechange
 9	 9
 Info	 Info / Angle
 Back	 Back / Return
 0	 0
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 PR-	 CH- / Page-
 PR+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge	Original	Recharge
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 TXT	 Text / Goto		
	 Sound / Title		
 []	 Smart / List		
 Swap	 Sleep / Timer		
 PIP	 D.Menu / Top		
 Pos	 Setup / OPT /		
 Size	 Shift + Zoom /		
 Freeze	 Pause / Step / Freeze		

