



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
Recall	Back / Return
Source	AV / Input / RDS
OK	OK
Up	Up

Original	Rechange
Down	Down
Right	Right
Left	Left
Prog+	CH+ / Page+
Prog-	CH- / Page-
Vol+	Vol+
Info	Info / Angle
EPG	Guide / EPG / -/--
Menu	Menu / Home
Red/A	Red / Netflix / Search
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
Sleep	Sleep / Timer
Cancel	Exit / Cancel / Clear
TXT	Text / Goto
Size	Zoom / Size





Original	Rechange
HOLD	Hold Stop / Hold
MIX	SHIFT + GOTO Text / Text /
REVEAL	PROGRAM TV/RADIO TV/Radio /
INDEX	TOP MENU D.MENU D.Menu / Top
SUBTITLE	EQ Subtitle / EQ
FAV	PC FAV MARKER Fav / Marker / PC
SUBPAGE	SURROUND Eject / Surround
FORMAT	SHIFT + FORMAT Picture / Format
VOL-	VOL- Vol-
P.MODE	FORMAT PICTURE Picture / Format
TEXT	OPT-TOOLS SETUP Setup / OPT /
S.MODE	TITLE SOUND Sound / Title
3DNR	LIST SMART Smart / List
MTS	MEDIA DISPLAY Display / Media

Original	Rechange

