



 



 

 



 

 

 




 
 


 
 

 









 

 











 

 












 







 


 











 





Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Shift + Back / Return	 Camera/Music/Ph	 Picture / Format
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Shift + Guide / EPG / -/-
 PR+	 CH+ / Page+	 */o..	 Fav / Marker / PC





	Original	Recharge	Original	Recharge
	[≡]/Text	 Text / Goto		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Lang	 Audio / Lang I/II		
	[≡]..	 Shift + Text /		
	[-o-]	 Setup / OPT /		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

