



| Original   | Rechange  |
|--|---|
|  Power    |  Power                   |
|  Source   |  AV / Input / RDS        |
|  1        |  1                       |
|  2        |  2                       |
|  3        |  3                       |
|  4        |  4                       |
|  5        |  5                       |
|  6        |  6                       |
|  7        |  7                       |
|  8        |  8                       |
|  9       |  9                      |
|  TV     |  TV/Radio /            |
|  0      |  0                     |
|  Recall |  Shift + Back / Return |
|  Vol+   |  Vol+                  |
|  Mute   |  Mute / Dimmer         |
|  PR+    |  CH+ / Page+           |

| Original  | Rechange  |
|---|---|
|  Vol-              |  Vol-                        |
|  World/Internet    |  Smart / List                |
|  PR-               |  CH- / Page-                 |
|  Menu              |  Menu / Home                 |
|  Q.Menu            |  D.Menu / Top                |
|  Up                |  Up                          |
|  Left              |  Left                        |
|  OK                |  OK                          |
|  Right             |  Right                       |
|  Down              |  Down                        |
|  Back             |  Back / Return              |
|  Exit            |  Exit / Cancel / Clear     |
|  i               |  Info / Angle              |
|  Camera/Music/Ph |  Picture / Format          |
|  Guide           |  Guide / EPG / -/-         |
|  */o             |  Shift + Guide / EPG / -/- |
|  */o..           |  Fav / Marker / PC         |





|   | Original | Recharge  | Original | Recharge |
|---|----------|---|----------|----------|
|    | [≡]/Text |  Text / Goto                 |          |          |
|    | Red      |  Red / Netflix / Search      |          |          |
|    | Green    |  Green / APP / Repeat        |          |          |
|    | Yellow   |  Yellow / YouTube / Repeat   |          |          |
|    | Blue     |  Blue / Prime Video / Random |          |          |
|    | Lang     |  Audio / Lang I/II           |          |          |
|    | [≡]..    |  Shift + Text /              |          |          |
|    | [-o-]    |  Setup / OPT /               |          |          |
|    | <<       |  << / Tune-                  |          |          |
|    | Pause    |  Pause / Step / Freeze       |          |          |
|   | >>       |  >> / Tune+                 |          |          |
|  | Rec      |  Rec / Rec Mode            |          |          |
|  | Play     |  Play / Slow               |          |          |
|  | Stop     |  Stop / Hold               |          |          |
|   |          |   |          |          |
|   |          |   |          |          |
|   |          |   |          |          |
|   |          |   |          |          |

