



 



 

 



 

 

 




 
 


 
 

 









 

 











 

 















Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		World/Internet		Smart / List
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Q.Menu		D.Menu / Top
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back / Return
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		i		Info / Angle
	Recall		Shift + Back / Return		Camera/Music/Ph		Picture / Format
	Vol+		Vol+		Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		*/o		Shift + Guide / EPG / -/-
	PR+		CH+ / Page+		*/o..		Fav / Marker / PC





	Original	Recharge	Original	Recharge
	[≡]/Text	 Text / Goto		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Lang	 Audio / Lang I/II		
	[≡]..	 Shift + Text /		
	[-o-]	 Setup / OPT /		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

