 











 






 

 
 
 

 






 



 

 

 







 







 

 
 
 










Original	Rechange	Original	Rechange
 Power	 Power	 Tv Menu	 Menu
 Mute	 Mute	 -/--	 Shift + Guide
 1	 1	 Guide	 Guide
 2	 2	 Source	 AV
 3	 3	 Enter	 Ok
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 CH-	 Ch -
 9	 9	 CH+	 Ch +
 0	 0	 Vol-	 Vol -
 Recall	 Pre Ch	 Vol+	 Vol +
 Audio/Nicam	 Dual	 Text	 Text
 Display	 Shift + Info	 <<	 <<
 Exit	 Exit	 >>	 >>
 Auto	 Smart	 Hold	 Options





Original		Rechange		Original		Rechange	
	Index		Info		Yellow		Yellow
	I<<		I<<		Blue		Blue
	Size		Format		P.Mode		Shift + Format
	>>I		>>I		S.Mode		Shift + Dual
	Play/Pause		Play				
	Stop/Subpage		Stop				
	Zoom/Reveal		3D				
	Sleep		Sleep				
	Rec		Rec				
	Media		Media				
	Repeat/FAV-		Shift + Text				
	FAV		Shift + Pre Ch				
	FAV+		Shift + AV				
	Subtitle		Subt				
	Tv/Radio		TV/R				
	Red		Red				
	Green		Green				

