 

 

 





 

 

 

 

 
 
 

 
 
 
 
 
 
 
 
 
 

 
 
 


 

 
 
 

 

 

 
 
 
 
 

 
 


 


 
 
 



 




Original		Rechange		Original		Rechange	
	Power		Power		TV/Audio		7
	Sleep		Sleep		AUX2		8
	CH/Page+		Ch +		Tuner		9
	CH/Page-		Ch -		iPod/USB		Guide
	Vol+		Vol +		CD		0
	Vol-		Vol -		Bluetooth		Pre Ch
	Mute		Mute		Online Music		Dual
	Back		Back		Internet Radio		TV/R
	Setup		D. Menu		Eco		Shift + 3D
	Info		Info		Play		Play
	CBL/SAT		1		Pause		Pause
	Option		Options		>>I/Tune+		>>I
	DVD		2		I<</Tune-		I<<
	Blu-ray		3		Green/Movie		Green
	Game		4		Red/Music		Red
	AUX1		5		Blue/Game		Blue
	Media Player		6		Yellow/Pure		Yellow





Original		Recharge	
	1 Quick Select		Text
	2 Quick Select		AV
	3 Quick Select		Format
	4 Quick Select		3D
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Original		Recharge	





Original	Rechange
 Power	 Power
 Sleep	 Sleep
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Back	 Back
 Play	 Play
 Pause	 Pause
 >>I/Tune+	 >>I
 I<</Tune-	 I<<

Original	Rechange
 1 Quick Select	 Text
 2 Quick Select	 AV
 3 Quick Select	 Format
 4 Quick Select	 3D
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 Media Player	 6
 TV/Audio	 7
 AUX2	 8
 Tuner	 9
 iPod/USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Online Music	 Dual





Original	Rechange	Original	Rechange
 Internet Radio	 TV/R		

