















 








 


 





 





 


 


 


 





	Original	Recharge		Original	Recharge
	Power		Power		0
	Up		Up		PP
	Down		Down		-/--
	Right		Right		P<P
	Left		Left		CH-
	OK/Select		Ok		CH+
	Menu		Menu		Vol+
	[i]/Info		Info		Vol-
	1		1		Mute
	2		2		I-II
	3		3		DTV/TV
	4		4		AV
	5		5		Red/Sound/▲
	6		6		Green/Picture/▼
	7		7		Yellow/Feature
	8		8		Blue/Install
	9		9		[≡]/Text





Original	Recharge	Original	Recharge
[≡o]	Subt		
[≡+]	Options		
[≡x]/[□□]	Exit		
[*]	Smart		
[+]/Wide/[≡ ♦]	3D		
[≡ ?]/PC	Media		
[≡ i]/Guide	Guide		
Subtitle	Sleep		
Lang	Eject		
Screen	Format		
FAV	+ Shift + Pre Ch		

