



 

 
 
 

 
 

 
 




 

 

 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Info	 Info / Angle
 Angle	 Shift + Info / Angle
 Copy	 Picture / Format
 Zoom	 Zoom / Size
 Tv Sys	 Smart / List
 Music	 Sound / Title
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Rechange
 8	 8
 9	 9
 Time Shift	 Sleep / Timer
 0	 0
 Goto	 Shift + Text /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 <</FR	 << / Tune-
 >>/FF	 >> / Tune+
 A-B	 Shift + Yellow / YouTube /
 Repeat	 Shift + Green / APP /
 >>I/Next	 >>I / Preset+
 Vol+	 Vol+
 Play/Pause	 Play / Slow
 Vol-	 Vol-





Original	Recharge	Original	Recharge
I<</Prev	I<< / Preset-		
Home	D.Menu / Top		
Up	Up		
X/Return	Back / Return		
Left	Left		
Enter	OK		
Right	Right		
Select	Fav / Marker / PC		
Down	Down		
Wuaki TV	Display / Media		
Red	Red / Netflix / Search		
Green/EPG	Green / APP / Repeat		
Green/EPG	Guide / EPG / -/--		
Yellow/TTX	Yellow / YouTube / Repeat		
Yellow/TTX	Text / Goto		
Blue	Blue / Prime Video / Random		

Original	Recharge	Original	Recharge

