





 





 
















Original	Rechange
 Open/Close	 Eject / Surround
 Power	 Power
 Dig.Out	 AV / Input / RDS
 Dig.Out	 Shift + 1
 USB	 Shift + 8
 USB	 Shift + 2
 Disc	 Shift + 3
 S.Mode	 Sound / Title
 Filter	 Setup / OPT /
 Display	 Display / Media
 Program	 TV/Radio /
 Random	 Blue / Prime Video / Random
 Time	 Sleep / Timer
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Text	 Text / Goto
 AMS	 Smart / List

Original	Rechange
 Input Up	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Input Down	 CH- / Page-
 Enter	 OK
 Vol-	 Vol-
 Folder Down	 Down
 Pause	 Pause / Step / Freeze
 Folder Up	 Up
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 1	 1
 2	 2





Original		Recharge		Original		Recharge	
3	3	CO - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
MENU	Menu	HOME MENU	Menu / Home				
0	0	HDMI - BAT 0	0				

