 
 
 
 
 
 

 

 
 
 
 
 


 
 
 

 
 
 



 
 
 
 
 





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Mute		Mute		9		9
	Vol+		Vol +		0		0
	Vol-		Vol -		-/--		Shift + Guide
	Prog+		Ch +		PRE		Pre Ch
	Prog-		Ch -		Up/P+		Up
	[≡]/TXT		Text		Down/P-		Down
	[ + ]/Display		Info		Right/Vol+		Right
	Tv/DVB-T		Smart		Left/Vol-		Left
	[ ]/Line		Media		[II]/Tv Menu		Menu
	1		1		-IXI-/Exit		Exit
	2		2		Timer/Sleep		Shift + Power
	3		3		-I/I-/P.STD		Shift + Format
	4		4		-I/I-/S.STD		Shift + Dual
	5		5		[<>]/P.Size		Format
	6		6		Open/Close		Eject
	7		7		Rec		Rec





Original	Rechange	Original	Rechange
 Stop	 Stop	 [ /≡]/Audio	 SOUND DUAL Dual
 Play	 PLAY MODE Play	 [≡♦]/Subtitle	 AD SUBT Subt
 Pause	 Pause	 [≡?]/Goto	 SETTINGS OPT Options
 <</< Slow	 << <<	 [≡+]/Program/Me	 SEARCH TVR TV/R
 Slow >/>>	 >> >>	 [<≡]/List/Angle	 SHIFT + CH - Shift + Ch -
  <</<  Step	 <<<  <<	 [≡>]/Bookmark/O	 SHIFT + CH + Shift + Ch +
 Step  >/>>	 >>>  >>	 [≡o]/Zoom/EPG	 GUIDE Guide
 Red/Setup	 A Red	 [≡X]/Cancel/i	 ECO 3D 3D
 Green/Input	 B Green	 MS	 RETURN BACK Back
 Yellow/Title	 C Yellow	 [▼]/Still	 TIMER AV AV
 Blue/Menu	 D Blue	 ENTER OK	 OK Ok
 PIP On/Off	 SHIFT + ECO 3D Shift + 3D		
 PIP Source	 SHIFT + TIMER AV Shift + AV		
 PIP Sound	 SHIFT + SEARCH TVR Shift + TV/R		
 PIP Swap	 SHIFT + AD SUBT Shift + Subt		
 Timer/repeat	 SHIFT + REPEAT TEXT Shift + Text		
 [≡i]/A-B	 SHIFT + DISPLAY INFO Shift + Info		

