



 
 
 
 
 










Original	Recharge
 Power	 Power
 Tv/SAT	 TV/R
 Mute	 Mute
 Piloto	 Info
 Guia	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Recharge
 8	 8
 9	 9
 0	 0
 X/Prefer	 Pre Ch
 →/Salir	 Exit
 Serv	 Smart
 +	 Media
 Perso	 Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 E/Text	 Text

