 





 



 
 








 
 




	Original	Rechange		Original	Rechange
	On/Standby		Power		Down
	Open/Close		Eject		Right
	CD		Yellow		Left
	Play		Play		Menu/Set
	Tuner		Green		Mute
	Aux		Red		Play/Pause iPod
	Pause		Pause		Remote iPod
	Sleep		Sleep		Dimmer
	Stop/Band		Stop		Time/Display
	I<</Tuning-		I<<		Clock
	>>/Tuning+		>>I		Folder Mode
	<< Search		<<		SDB/Tone
	>> Search		>>		1
	Vol+		Vol +		2
	Vol-		Vol -		3
	Enter/Memo		Ok		4
	Up		Up		5





	Original	Rechange	Original	Rechange
	6			
	7			
	8			
	9			
	0/10			
	+10			
	Prog/Dir			
	Random			
	Rep 1/All			
	Clear			
	Call			
	PTY			
	DAB/XM/RDS			
	I<< iPod			
	>>I iPod			
	P.List Down iPod			
	P.List Up iPod			

