

 



 
 

 
 



 
 
 





 
 


 
 
 
 
 

 

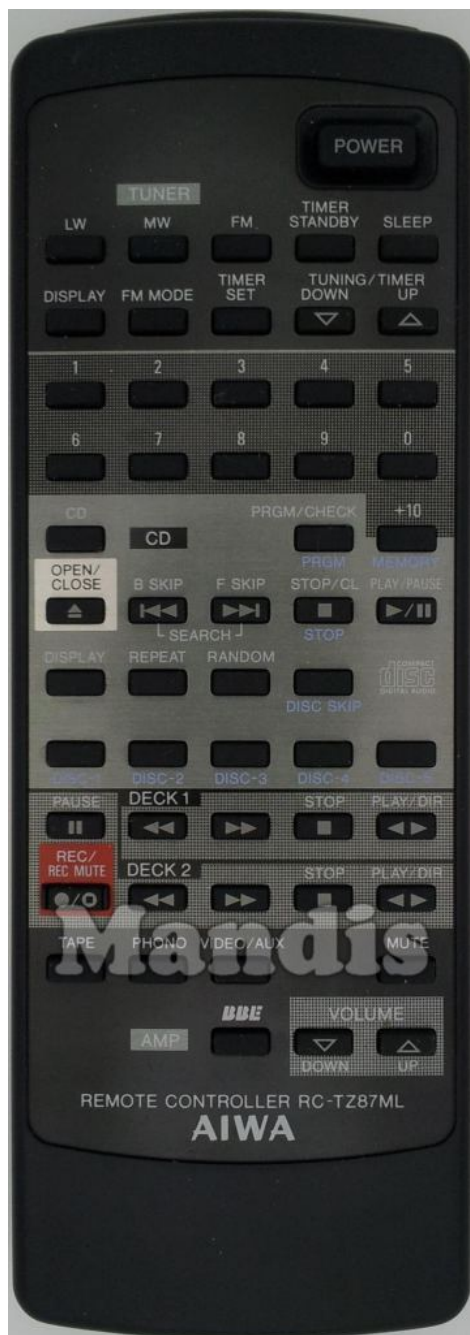 


Original	Recharge
 Power	 Power
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 0 CD	 0
 +10/Memory	 +  Shift + Guide
 Vol+	 Vol +
 Vol-	 Vol -
 BBE	 Smart
 Tape	 Red
 Phono	 Green

Original	Recharge
 Video/AUX	 Yellow
 Mute	 Mute
 Timer Set	 Menu
 FM Mode	 TV/R
 Display	 Info
 Sleep	 Sleep
 Timer Standby	 Exit
 FM	 Pre Ch
 Tuning/Timer	 Ch +
 Tuning/Timer	 Ch -
 LW	 Back
 MW	 Media
 CD	 Blue
 PRGM/Check/PR	 3D
 Play CD	 Play
 Pause CD	 Pause
 Stop/CL CD	 Stop





Original	Recharge
 Search >>I/F.Skip CD	 >>I
 I<< Search/B.Skip CD	 I<<
 Open/Close CD	 +  Shift + Pre Ch
 Display CD	 D. Menu
 Random CD	 +  Shift + Smart
 Disc Skip CD	 +  Shift + Media
 >> Deck 2	 >>
 << Deck 2	 <<
 Stop Deck 2	 AV
 <>/Play/Dir Deck	 Text
 Rec/Rec Mute	 Format
 Pause Deck	 Down
 << Deck 1	 Left
 >> Deck 1	 Right
 Stop Deck 1	 Up
 <>/Play/Dir Deck	 Ok
 Disc-1	 Options

Original	Recharge
 Disc-2	 Dual
 Disc-3	 Subt
 Disc-4	 +  Shift + Text
 Disc-5	 +  Shift + AV
 1 FM	 +  Shift + 1
 2 FM	 +  Shift + 2
 3 FM	 +  Shift + 3
 4 FM	 +  Shift + 4
 5 FM	 +  Shift + 5
 6 FM	 +  Shift + 6
 7 FM	 +  Shift + 7
 8 FM	 +  Shift + 8
 9 FM	 +  Shift + 9
 0 FM	 +  Shift + 0
 Repeat CD	 +  Shift + Format
 +10 FM	 Guide

