

 

 


































 



Original	Recharge
 Power	 Power
 Source	 AV / Input / RDS
 HDMI	 Shift + 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Recharge
 P+	 CH+ / Page+
 Vol-	 Vol-
 CH.List	 Smart / List
 P-	 CH- / Page-
 Media.P	 Display / Media
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search





Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 P.Mode	 Picture / Format		
 S.Mode	 Sound / Title		
 Dual/I-II	 Shift + Audio / Lang I/II		
 AD	 Audio / Lang I/II		
 P.Size	 Zoom / Size		
 Subt.	 Subtitle / EQ		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

