





















 











 



 



 



 



 



 



 



 



 





Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute / Dimmer
	Tv/AV		AV / Input / RDS		Vol-		Vol-
	1		1		Up		Up
	2		2		CH+		CH+ / Page+
	3		3		Vol+		Vol+
	Eject		Eject / Surround		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Sys Menu		D.Menu / Top
	Play/Pause		Play / Slow		CH-		CH- / Page-
	7		7		Down		Down
	8		8		Display		Display / Media
	9		9		Picture		Picture / Format
	Stop		Stop / Hold		Sound		Sound / Title
	0		0		Timer		Sleep / Timer
	-/--		Shift + Guide / EPG / -/--		Nicam/A2		Audio / Lang I/II
	Return		Back / Return		Lan/Prog-		Shift + CH- / Page-



