

 









 









 

 

 

 

 

 

 

 

 



 

 

 


 
 

 





 

 











Original		Recharge		Original		Recharge	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		i/Info		Info / Angle
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Up		Up
	4		4		Q.Menu		D.Menu / Top
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		World		Smart / List
	Recall		Shift + Back / Return		Music Photo		Picture / Format
	Vol+		Vol+		Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		*/o		Display / Media
	PR+		CH+ / Page+		*/o..		Shift + Display / Media





Original	Recharge
≡/Text	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Lang	Audio / Lang I/II
[≡]..	Shift + Text /
[-O-]	Setup / OPT /
<<<	<<< / Tune-
Pause	Pause / Step / Freeze
>>>	>>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold

Original	Recharge

