





 

 

 

 

 

 



 

 

 

 

 

 

 



 
 
 

 





 

 



 

 

 

 

 


 
 








 













 




 


 

 
| Original | Rechange |
|---|---|
|  Eject |  Eject / Surround |
|  Tv Power |  Shift + Power |
|  Power |  Power |
|  Stereo/mono |  Shift + Sound / Title |
|  Name |  AV / Input / RDS |
|  Dimmer |  Shift + Mute / Dimmer |
|  Repeat |  Green / APP / Repeat |
|  Tv/Video |  TV/Radio / |
|  Clear |  Exit / Cancel / Clear |
|  Memory |  Shift + D.Menu / Top Menu |
|  Time |  Sleep / Timer |
|  Muting |  Mute / Dimmer |
|  Play Mode |  Play / Slow |
|  1 |  1 |
|  1 TV |  Shift + 1 |
|  2 |  2 |
|  2 TV |  Shift + 2 |

| Original | Rechange |
|--|---|
|  3 |  3 |
|  3 TV |  Shift + 3 |
|  Function |  Shift + Setup / OPT / Tools |
|  Audio |  Audio / Lang I/II |
|  4 |  4 |
|  4 TV |  Shift + 4 |
|  5 |  5 |
|  5 TV |  Shift + 5 |
|  6 |  6 |
|  6 TV |  Shift + 6 |
|  Band |  Picture / Format |
|  Angle |  Info / Angle |
|  7 |  7 |
|  7 TV |  Shift + 7 |
|  8 |  8 |
|  8 TV |  Shift + 8 |
|  9 |  9 |





| Original | Rechange |
|---|---|
|  9 TV |  Shift + 9 |
|  Sound Field |  Sound / Title |
|  Subtitle |  Subtitle / EQ |
|  >10 |  Guide / EPG / -/-- |
|  >10 TV |  Fav / Marker / PC |
|  0/10 |  0 |
|  0/10 TV |  Shift + 0 |
|  Enter |  Shift + OK |
|  Display |  Display / Media |
|  Vol+ |  Vol+ |
|  Vol+ Tv |  Shift + Vol+ |
|  Vol- |  Vol- |
|  Vol- Tv |  Shift + Vol- |
|  I<< |  I<< / Preset- |
|  I<< TV |  Shift + I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  >>I TV |  Shift + >>I / Preset+ |

| Original | Rechange |
|--|---|
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Play/Select |  Shift + Play / |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  DVD Display |  Shift + Display / Media |
|  DVD Top Menu |  Menu / Home |
|  Up |  Up |
|  DVD Menu |  D.Menu / Top |
|  Return |  Back / Return |
|  Left |  Left |
|  OK |  OK |
|  Enter TV |  Shift + Down |
|  Right |  Right |
|  DVD Setup |  Setup / OPT / |
|  AMP Menu |  Shift + Menu / |
|  Down |  Down |

