



Original		Rechange		Original		Rechange	
	Power		Power		Info		Info
	Mute		Mute		Exit		Exit
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		OK		Ok
	6		6		CH+		Ch +
	7		7		CH-		Ch -
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Rec		Rec
	Movie		Media		Stop		Stop
	FAV/Repeat		Pre Ch		Play		Play
	Menu		Menu		Pause		Pause
	Lang		Dual		I<		I<<
	EPG		Guide		>I		>>I



