


 






 




Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 Guide / EPG / -/--
 PRE-CH	 0
 TV	 Back / Return
 CH.MGR	 Display / Media
 Sleep	 Smart / List
	 Sleep / Timer

Original	Rechange
 PC	 Fav / Marker / PC
 Vol+	 Vol+
 P+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 P-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 [≡+]/PIP	 Play / Slow
 [≡?]/Info	 Info / Angle
 TTX/MIX	 Text / Goto
 Red / P.Mode	 Red / Netflix / Search





Original	Recharge	Original	Recharge
P.MODE Red / P.Mode	FORMAT Picture / Format		
S.MODE Green / S.Mode	APP Green / APP / Repeat		
S.MODE Green / S.Mode	TITLE Sound / Title		
STILL Yellow / Still	YouTube Yellow / YouTube / Repeat		
STILL Yellow / Still	STEP-FREEZE Pause / Step / Freeze		
P.SIZE Blue / P.Size	Prime Video Blue / Prime Video / Random		
SOURCE [≡◆] / PIP Source	HOLD Stop / Hold		
SWAP [≡◇] / PIP Swap	TUNE+ >> / Tune+		
SIZE Size	SIZE ZOOM Zoom / Size		
PIP P+ PIP P+	PRESET+ >> / Preset+		
DUAL I-II/Dual	LANG I/II Audio / Lang I/II		
SRS (o)/SRS	SURROUND Eject / Surround		
POSITION PIP Position	TUNE- << / Tune-		
PIP P- PIP P-	PRESET- << / Preset-		

