



Original	Recharge	Original	Recharge
[i+]/[?]	Info / Angle	[> <]	Shift + Picture / Format
Power	Power	Red	Red / Netflix / Search
1	1	Green	Green / APP / Repeat
2	2	Yellow	Yellow / YouTube / Repeat
3	3	Blue	Blue / Prime Video / Random
4	4	[]	Guide / EPG / -/--
5	5	Up	Up
6	6	Source	AV / Input / RDS
7	7	Left	Left
8	8	OK	OK
9	9	Right	Right
[≡]	Text / Goto	Return	Shift + Back / Return
0	0	Down	Down
Recall	Back / Return	Tools	Setup / OPT /
Digital/Analog	Display / Media	Menu	Menu / Home
A/B	Shift + Yellow / YouTube /	I<<	I<< / Preset-
Format	Picture / Format	←	Shift + << /

Tune-



 













 



 



Original	Recharge
 →	 Shift + >> /
 >>	 >> / Preset+
 < < /<<<	 <<< / Tune-
 Play	 Play / Slow
 >> > / >	 >> / Tune+
 Theatre	 Smart / List
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Vol-	 Vol-
 Prog-	 CH- / Page-
 Rec	 Rec / Rec Mode
 Rec Pause	 Shift + Pause / Step /
 Rec Stop	 Shift + Stop /

Original	Recharge



 



 

 

 

 

 

 

 

 

 



 

 

 

 





 

 

 

 





 



 





 



 

 

 



Original	Rechange
 [i+]/[?]	 Info / Angle
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back / Return
 A/B	 Yellow / YouTube / Repeat
 Up	 Up
 Left	 Left
 OK	 OK

Original	Rechange
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 I<<	 I<< / Preset-
 ←	 Shift + << /
 →	 Shift + >> /
 >>I	 >>I / Preset+
 <II/<I/<<	 << / Tune-
 Play	 Play / Slow
 >>I/>II>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Top Menu	 D.Menu / Top
 Menu BD/DVD	 Menu / Home

 

 

 


 





Original	Recharge	Original	Recharge
 [i+]/[?]	 Info / Angle	 Green	 Green / APP / Repeat
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 1	 1	 Blue	 Blue / Prime Video / Random
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Return	 Back / Return
 7	 7	 Down	 Down
 8	 8	 Tools	 Setup / OPT /
 9	 9	 Menu	 Menu / Home
 [≡]	 Text / Goto	 I<<	 I<< / Preset-
 0	 0	 >>I	 >>I / Preset+
 Digital/Analog	 Display / Media	 <II/<I/<<	 << / Tune-
 [+]	 Shift + Stop /	 Play	 Play / Slow
 [>I<]	 Picture / Format	 >>I/>II>	 >> / Tune+
 Red	 Red / Netflix / Search	 Theatre	 Smart / List



 

 



 







 



 



 









 

 



 





 

 



 

 



 



 

 

 





Original	Recharge
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Top Menu	 +  Shift + D.Menu / Top Menu
 Menu BD/DVD	 D.Menu / Top

Original	Recharge

 


 





Original	Rechange	Original	Rechange
 [i+]/[?]	 ANGLE INFO Info / Angle		 OK OK
 TV I/O Power			 Right Right
 1	 TV 1 1		 SHIFT + BACK Shift + Back / Return
 2	 DVD 2 2		 Down Down
 3	 CD - STB 3 3		 HOME MENU Menu / Home
 4	 VIDEO 4 4		 PRESET- I<< / Preset-
 5	 TAPE 5 5		 SHIFT + TUNE- Shift + << /
 6	 TUNER 6 6		 SHIFT + TUNE+ Shift + >> /
 7	 AUX - HDD 7 7		 PRESET+ >>I / Preset+
 8	 USB 8 8		 TUNE- << / Tune-
 9	 BLUETOOTH 9 9		 SLOW Play / Slow
 0	 HDMI - BAT 0 0		 TUNE+ >> / Tune+
	 RETURN BACK Back / Return		 STEP - FREEZE Pause / Step / Freeze
	 YouTube REPEAT A-B Yellow / YouTube / Repeat		 HOLD Stop / Hold
			 DIMMER MUTE Mute / Dimmer
	 RDS AV INPUT AV / Input / RDS		 VOL+ Vol+
			 VOL- Vol-





Original	Recharge
 Top Menu	 +  Shift + D.Menu / Top Menu
 Menu BD/DVD	 D.Menu / Top

Original	Recharge

