


 


 




 







 























 

 

 



 





 
 


 

 



 
 
 




Original		Recharge		Original		Recharge	
	Power		Power		[≡>≡]		Options
	Mute		Mute		OK		Ok
	1		1		Up		Up
	2		2		CH+		Ch +
	3		3		Down		Down
	4		4		CH-		Ch -
	5		5		Righ		Right
	6		6		Vol+		Vol +
	7		7		Left		Left
	8		8		Vol-		Vol -
	9		9		Red		Red
	0		0		Green		Green
	Mode		Guide		Yellow		Yellow
	Rec		Rec		Blue		Blue
	Menu		Menu		Play/Pause		Play
	& (Red)		Dual		Stop		Stop
	Return		Back		<<		<<





Original	Recharge	Original	Recharge
 >>	 >>		

