


 



 



 



 

 


 







 
 







 

 

 

 


 
 


 



 
 


 
 



 


 





Original	Recharge	Original	Recharge
 Power	 Power	 0	 0
 Source	 AV	 1	 1
 [+]	 Format	 2	 2
 Guide	 Guide	 3	 3
 [i]/[?]	 List	 4	 4
 Options	 Options	 5	 5
 Return	 Shift + Back	 6	 6
 Sync Menu	 Menu	 7	 7
 Home	 Smart	 8	 8
 Mute	 Mute	 9	 9
 [...]	 Subt	 Digital	 TV/R
 PR+	 Ch +	 Analog	 Back
 PR-	 Ch -	 Scene	 Shift + Guide
 Vol+	 Vol +	 Audio	 Dual
 Vol-	 Vol -	 OK	 Ok
 [≡]/Text	 Text	 Down	 Down
 ♥	 Pre Ch	 Up	 Up





Original	Rechange
 Right	 Right
 Left	 Left
 Theatre	 Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>/>>	 >>
 <</ <<	 <<

Original	Rechange

