







 

 
 
 
 

 
 
 

 

 
 
 
 
 

 
 


 

 















Original	Recharge	Original	Recharge
 Start/Stop	 Power	 <II/<	 Left
 T	 Up	 Stop	 Stop
 W	 Down	 >II>	 Right
 Photo	 Media	 Pause	 Pause
 Zero Set	 Menu	 Slow I>	 Shift + >>
 Display	 Info	 x2	 Options
 Data Code	 Smart	 Rec	 Rec
 Play Memory	 Ok	 Mark	 3D
 Index Memory	 Guide	 Audio Dub	 Dual
 Memory-	 Ch -		
 Memory+	 Ch +		
 Search Mode	 AV		
 I<<	 I<<		
 >>I	 >>I		
 <<	 <<		
 Play	 Play		
 >>	 >>		

