 

 







 



 

 

 



 

 



 





















 



 

 










 
 




| Original | Rechange | Original | Rechange |
|--|---|---|---|
|  Source |  AV / Input / RDS |  [...] |  Subtitle / EQ |
|  Sync Menu |  D.Menu / Top |  Red |  Red / Netflix / Search |
|  Power |  Power |  Green |  Green / APP / Repeat |
|  Digital/Analog |  Display / Media |  Yellow |  Yellow / YouTube / Repeat |
|  Audio |  Audio / Lang I/II |  Blue |  Blue / Prime Video / Random |
|  [+] |  Zoom / Size |  Guide |  Guide / EPG / -/-- |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  [i+]/[?] |  Info / Angle |
|  3 |  3 |  Left |  Left |
|  4 |  4 |  OK |  OK |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Return |  Back / Return |
|  7 |  7 |  Down |  Down |
|  8 |  8 |  Options |  Setup / OPT / |
|  9 |  9 |  Home |  Menu / Home |
|  [≡] |  Text / Goto |  Vol+ |  Vol+ |
|  0 |  0 |  Recall |  Fav / Marker / PC |





| | Original | Recharge | Original | Recharge |
|--|----------|---|----------|----------|
|  | Prog+ |  CH+ / Page+ | | |
|  | Vol- |  Vol- | | |
|  | Mute |  Mute / Dimmer | | |
|  | Prog- |  CH- / Page- | | |
|  | << |  << / Tune- | | |
|  | Play |  Play / Slow | | |
|  | >> |  >> / Tune+ | | |
|  | I<< |  I<< / Preset- | | |
|  | Pause |  Pause / Step / Freeze | | |
|  | Stop |  Stop / Hold | | |
|  | >>I |  >>I / Preset+ | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

