



 




 
 
 









 
 

 







 

 
 
 
 

 
 
 
 


 
 
 


Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV/ZAPP	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Recharge
 Exit/TV-G	 Exit
 ?	 Smart
 @	 Media
 Menu/i	 Menu
 Back	 Back
 Tools	 Options
 Guide	 Guide
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 AV	 AV





Original		Rechange		Original		Rechange	
	Mute		Mute				
	I<		I<<				
	>I		>>I				
	<<		<<				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	3D/Search		Format				
	..O/Audio		Dual				
	[...].		Subt				
	PIP/ECO		3D				
	My Media/CEC		TV/R				

