

 


 





 
















 




Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source/Rec	 AV / Input / RDS
 0	 0
 Timer	 Sleep / Timer
 Menu Disc	 Setup / OPT /
 Up	 Up
 CH+	 CH+ / Page+
 Menu System	 Menu / Home

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Edit	 Text / Goto
 CH-	 CH- / Page-
 Down	 Down
 Select	 Display / Media
 Stop	 Stop / Hold
 Play	 Play / Slow
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Top Menu	 D.Menu / Top
 >>I	 >>I / Preset+
 Audio	 Audio / Lang I/II
 T/C	 Picture / Format
 Return	 Back / Return





	Original	Recharge	Original	Recharge
	 Angle	 Info / Angle		
	 Tv/DVD	 Smart / List		
	 Clear	 Exit / Cancel / Clear		
	 Rec Mode	 Shift + Rec / Rec Mode		
	 Subtitle	 Subtitle / EQ		

