 

 
 



 
 



 










 
 









 

 
 
 



 
 

 


 

 






 


 
 





 




 

 

 
 






Original	Recharge	Original	Recharge
 Power	 Power	 000	 Shift + 0
 Tv Power	 Shift + Power	 Play	 Play
 Tv Input	 AV	 Stop	 Stop
 Tv/VCR	 TV/R	 Pause	 Pause
 Showview/Video Plus+	 Smart	 Rec	 Rec
 Eject	 Eject	 >>	 >>
 1	 1	 <<	 <<
 2	 2	 PR+	 Ch +
 3	 3	 PR-	 Ch -
 4	 4	 Down	 Down
 5	 5	 Up	 Up
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Vol Tv+	 Vol +
 9	 9	 Vol Tv-	 Vol -
 0	 0	 OK/i	 Ok
 AV	 Media	 Menu	 Menu





Original	Rechange
 Tv PR+	 Shift + Ch +
 Tv PR-	 Shift + Ch -
 30Sec >>	 >>
 <</Eject/Power	 I<<
 Blocked	 Back
 '/'	 Options

Original	Rechange

