















 



 

 



 









 

 



 

 



 



 



 

 





 







Original	Recharge
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Setup / OPT /
	 0
	 AV / Input / RDS
	 Shift + 1
	 Sound / Title
	 Picture / Format

Original	Recharge
	 Info / Angle
	 Up
	 Left
	 OK
	 Right
	 Down
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Text / Goto
	 Menu / Home
	 CH+ / Page+
	 Vol-
	 Back / Return
	 TV/Radio /





Original	Recharge
CH-	CH- / Page-
FAV	Fav / Marker / PC
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Guide	Guide / EPG / -/--
[?]	Shift + Info / Angle
[≡x]	Shift + 5
[:≡]	Shift + 4
[⇕]	Shift + 3
[⇕]	Shift + 2
PIP Pos	D.Menu / Top
PIP Size	Zoom / Size
PIP	Eject / Surround

Original	Recharge

