

 

 
 
 
 
 

 

 

 



 

 

 

 




 








Original	Rechange	Original	Rechange
	Power		Power
	Source		Smart
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	FAV		Pre Ch
	Menu		Menu
	Exit		Exit

Original	Rechange	Original	Rechange
	Guide		Guide
	Return		Back
	Info		Info
	Presets		Format
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Red(O) Lang		Red
	Green/Subtitles		Green
	Yellow		Yellow







 
 
 

 
 

 


 
 




 
 


 




 




 


Original		Recharge		Original		Recharge	
	Blue		Blue				
	Text/Violet		Text				
	Stop Text		Dual				
	??? Text		Subt				
	Zoom Text		Eject				
	Media/Digital		Media				
	T-Link		TV/R				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Stop		Stop				
	Pause		Pause				





Original	Rechange
 Power	 Power
 AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Menu	 Menu
 Exit	 Exit
 OK	 Ok
 Up	 Up

Original	Rechange
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 Return	 Back
 Guide	 Guide
 Info	 Info
 Mute	 Mute
 Presets	 Format
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red/O Lang	 Red
 Green/Subtitles	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text/Violet	 Text





Original	Recharge	Original	Recharge
	Play		Play
	Stop		Stop
	Rec		Rec
	Pause		Pause
	>>		>>
	<<		<<

