 

 

 

 
 

 

 



 


 



 









Original	Recharge
 Source	 Shift + AV / Input / RDS
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/--
 FAV	 Fav / Marker / PC

Original	Recharge
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 Red/O Lang	 Red / Netflix / Search







 



 

 

 


 







 

 
 
 



 



 

 



 

 

 

 



 

 

 

 

 

 





Original	Recharge	Original	Recharge
 Red/O) Lang	 Audio / Lang I/II		
 Green/Subtitles	 Subtitle / EQ		
 Green/Subtitles	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet/Text	 Text / Goto		
 Stop Text	 Shift + Stop /		
 ??? Text	 Sleep / Timer		
 Zoom Text	 Zoom / Size		
 Media/Digital	 Display / Media		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 T-Link	 D.Menu / Top		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		





Original	Rechange
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home

Original	Rechange
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Info	 Info / Angle
 Vol+ Tv	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol- Tv	 Vol-
 PR-	 CH- / Page-
 Mute Tv	 Mute / Dimmer
 Red/O Lang	 Audio / Lang I/II
 Red/O Lang	 Red / Netflix / Search
 Subtitles	 Subtitle / EQ

 



 

 

 

 

 

 

 

 



 

 

 

 









	Original	Recharge	Original	Recharge
 Green/Subtitles	 Green / APP / Repeat	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random	 Blue / Prime Video / Random		
 Violet/Text	 Text / Goto	 Text / Goto		
	 << / Tune-	 << / Tune-		
	 Play / Slow	 Play / Slow		
	 >> / Tune+	 >> / Tune+		
	 Rec / Rec Mode	 Rec / Rec Mode		
	 Stop / Hold	 Stop / Hold		
	 Pause / Step / Freeze	 Pause / Step / Freeze		





Original	Recharge
 Source / Eject	 Eject / Surround
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0 / --	 Shift + Guide / EPG / --
 FAV	 Fav / Marker / PC

Original	Recharge
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / --
 Return	 Back / Return
 Info	 Info / Angle
 Vol +	 Vol+
 PR +	 CH+ / Page+
 Vol -	 Vol-
 PR -	 CH- / Page-
 Mute	 Mute / Dimmer
 Red / A-B	 Shift + Yellow / YouTube /
 Red / A-B	 Red / Netflix / Search





Original	Recharge	Original	Recharge
Green / Subtitles	Green / APP / Repeat		
Green / Subtitles	Subtitle / EQ		
Yellow / Size	Yellow / YouTube / Repeat		
Yellow / Size	Zoom / Size		
Blue / Lang	Blue / Prime Video / Random		
Blue / Lang	Audio / Lang I/II		
Purple / Text	Text / Goto		
Text Stop	Shift + Stop /		
Text ???	Sleep / Timer		
Text Zoom	Shift + Zoom /		
<<<	<<< / Tune-		
Play	Play / Slow		
>>>	>>> / Tune+		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		

