









 


 














 


 









 






 


 






 


 
 
 
 
 
 
 






 
 
 



 

 






	Original	Recharge		Original	Recharge
	Standby/On		Power		I<<
	1		1		>>I
	2		2		Play
	3		3		Stop
	4		4		<<
	5		5		>>
	6		6		Mute
	7		7		Prog+
	8		8		Prog-
	9		9		Vol+
	0		0		Vol-
	Tv/DVD		TV/R		Menu
	Open/Close		Eject		Return
	DTV/Analog		Smart		Exit
	Input Sel		AV		Title List/Disc Menu
	Copy		Options		Play List/Title Menu
	Pause		Pause		Red





Original	Rechange
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Info	 Info
 Subtitle	 Subt
 Text	 Text
 Tv/Radio	 Sleep
 FAV List	 Pre Ch
 Marker	 Shift + Options
 Rec	 Rec
 Audio	 Dual
 Rec Mode	 Shift + Rec
 Rec	 Format
 Repeat	 Shift + Text
 OK	 Ok
 Up	 Up

Original	Rechange
 Down	 Down
 Right	 Right
 Left	 Left
 USB	 Shift + Media
 Timer	 Shift + AV
 HDD	 Shift + Smart











 


 














 


 









 






 

 





	Original	Rechange	Original	Rechange
	Input Sel		AV	AV
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	Prog+		Ch +	Ch +
	Prog-		Ch -	Ch -
	Standby/On TV		Power	Power
	Mute Tv		Mute	Mute
	Tv Vol+		Vol +	Vol +
	Tv Vol-		Vol -	Vol -

 
 




 

 

 

 


 
 
 



 



 

 
 





 
 
 

 



	Original	Rechange		Original	Rechange
	Standby/On		Power		I<<
	1		1		>>I
	2		2		Play
	3		3		Stop
	4		4		<<
	5		5		>>
	6		6		Prog+
	7		7		Prog-
	8		8		Menu
	9		9		Return
	0		0		Exit
	Tv/DVD		TV/R		Title List/Disc Menu
	Open/Close		Eject		Play List/Title Menu
	DTV/Analog		Smart		Red
	Input Sel		AV		Green
	Copy		Options		Yellow
	Pause		Pause		Blue
					Shift + Menu





Original	Rechange
 Guide	 Guide
 Info	 Info
 Subtitle	 Subt
 Text	 Text
 Tv/Radio	 D. Menu
 FAV List	 Pre Ch
 Marker	 Shift + Options
 Rec	 Rec
 Audio	 Dual
 Rec Mode	 Shift + Rec
 Rec	 Format
 Repeat	 Shift + Text
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Rechange
 USB	 Shift + Media
 Timer	 Shift + AV
 HDD	 Shift + Smart

