 

 

 

 








 



 





 




 



 

 
 
 

 





 



 
 


 















Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Return	 Shift + Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 CH List	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE-CH	 Back / Return	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 PR+	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-

Original	Rechange	Original	Rechange
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 OK	 RETURN	 BACK
 EXIT	 LIST	 SMART	 CH PAGE
 CANCEL	 SMART	 MEDIA	 DISPLAY
 VOL+	 NETFLIX	 SEARCH	
 VOL-	 APP	 REPEAT	
 TV	 REPEAT A-B		
 DVD	 YouTube	 TV	 DVD
 CD - STB	 RANDOM	 TAPE	 TUNER
VIDEO	Prime Video	AUX - HDD	USB
MUTE	RANDOM	HDMI - BAT	BLUETOOTH
1	VOL	PC	FAV MARKER
2	NETFLIX	GUIDE EPG	
3	APP	0	
4	YouTube		
5	Prime Video		
6			
7			
8			
9			



