 

 

 

 





 



 


 



 

 

 






 

 
 

 





 


 
 















 
 








Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Return	 Shift + Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 CH List	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE-CH	 Back / Return	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 PR+	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-

Original	Rechange	Original	Rechange
 Tools	 Setup / OPT /	 Tools	 Setup / OPT /
 Return	 Shift + Back / Return	 Return	 Shift + Back / Return
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 OK	 Enter	 OK
 Right	 Right	 Right	 Right
 CH List	 Smart / List	 CH List	 Smart / List
 Down	 Down	 Down	 Down
 Exit	 Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search	 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat	 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random	 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+	 Vol+	 Vol+
 Source	 AV / Input / RDS	 Source	 AV / Input / RDS
 PR+	 CH+ / Page+	 PR+	 CH+ / Page+
 Vol-	 Vol-	 Vol-	 Vol-





Original	Recharge	Original	Recharge
 Mute	 Mute / Dimmer		
 PR-	 CH- / Page-		
 TTX/MIX	 Text / Goto		
 Media.P	 Display / Media		
 P.Size	 Zoom / Size		
 Dual I-II	 Audio / Lang I/II		
 AD	 Sound / Title		
 Subt.	 Subtitle / EQ		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

Original	Recharge

