



Original	Recharge
Source	AV / Input / RDS
Power Tv	Power
[+]	Shift + OK
3D	Zoom / Size
Theatre	Shift + Smart / List
<</< button icon"/> <</<	<< / Tune-
Play	Play / Slow
>>/ > button icon"/> >>/ >	>> / Tune+
Sync Menu	Shift + D.Menu / Top Menu
I<<	I<< / Preset-
Stop	Stop / Hold
>>I button icon"/> >>I	>>I / Preset+
?/i-Manual	Shift + Setup / OPT / Tools
Scene	Picture / Format
BD/DVD Top	Shift + Menu /
BD/DVD Menu	D.Menu / Top
Digital/Analog	Shift + Display / Media

Original	Recharge
Exit	Exit / Cancel / Clear
Internet Widgets	Display / Media
Internet Video	Smart / List
♥/FAV	Fav / Marker / PC
Guide	Guide / EPG / -/-
Right	Right
[i+]/Info	Info / Angle
Up	Up
OK	OK
Left	Left
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home	Menu / Home
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat





 

 









 









 

 

 

 





Original	Rechange
Power	Power
<</>	<< / Tune-
Play	Play / Slow
>>/>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
Top Menu	D.Menu / Top
Menu	Menu / Home
Right	Right
[i+]/Info	Info / Angle
Up	Up
Left	Left
Return	Back / Return
Down	Down
Home	Shift + Menu /
1	1

Original	Rechange
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
[...]	Subtitle / EQ
Prog+	CH+ / Page+
Audio	Audio / Lang I/II
Prog-	CH- / Page-





Original	Recharge
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /

Original	Recharge
 Home	 Shift + Menu /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ





Original	Rechange
 Source	 AV / Input / RDS
 Power	 Power
 <</<I	 << / Tune-
 Play	 Play / Slow
 >>/I>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down

Original	Rechange
 Home	 Shift + Menu /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Vol-	 Vol-

