

 

 

 

 



 

 

 
 
 









Original	Rechange	Original	Rechange
	 Power		 Sleep/Timer
	 Mute		 Up
	 Red		 Down
	 Green		 >>
	 Yellow		 <<
	 Blue		 Ok
	 Text		 Right
	 3D		 Left
	 TV/R		 >>
	 D. Menu		  <<
	 Info		 Play
	 Subt		 Pause
	 Eject		 Stop
	 Dual		 Pre Ch
	 Options		 1
	 Menu		 2
	 AV		 3





Original		Rechange		Original		Rechange	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				

