



Original		Recharge		Original		Recharge	
	Input/Tuner	+	Shift + AV / Input / RDS		Stop		Stop / Hold
	Open/Close		Eject / Surround		Play		Play / Slow
	Standby		Power		Pause/Step		Pause / Step / Freeze
	BT Audio	+	Shift + 9		I<<		I<< / Preset-
	Optical		Setup / OPT /		<<		<< / Tune-
	Display		Display / Media		>>		>> / Tune+
	Home Menu	+	Shift + Menu /		>>I		>>I / Preset+
	Menu		Menu / Home		SKP Level		D.Menu / Top
	Up		Up		SKP Level	+	Shift + D.Menu / Top Menu
	Preset Up	+	Shift + >>I / Preset+		Vol+		Vol+
	Left/Tune-		Left		USB Rec	+	Shift + 8
	Enter		OK		Mute		Mute / Dimmer
	Right/Tune+		Right		Vol-		Vol-
	Down		Down		Sound		Sound / Title
	Preset Down	+	Shift + I<< / Preset-		1		1
	Return		Back / Return		2		2
	PopUp/Top		Smart / List		3		3



Menu



Original	Recharge
Marker	Fav / Marker / PC
4	4
5	5
6	6
Search	Shift + Red / Netflix /
7	7
8	8
9	9
Repeat	Green / APP / Repeat
Dimmer	Shift + Mute / Dimmer
0	0
Zoom	Zoom / Size
Clear	Exit / Cancel / Clear
Red/RDS	Red / Netflix / Search
Yellow/PTY Search	Yellow / YouTube / Repeat
Blue/ST/Mono	Blue / Prime Video / Random
Power Tv	Shift + Power

Original	Recharge
PR+ Tv	CH+ / Page+
Vol+ Tv	Shift + Vol+
AV/Input Tv	AV / Input / RDS
PR- Tv	CH- / Page-
Vol- Tv	Shift + Vol-
Sleep	Sleep / Timer

