



Original	Rechange
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Title/Return	Back / Return
Title/Return	Sound / Title
0	0
Display	Display / Media
Disc Menu	D.Menu / Top
Up	Up
System Menu	Menu / Home

Original	Rechange
Left	Left
OK	OK
Right	Right
I<<	I<< / Preset-
Down	Down
>>I	>>I / Preset+
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Subtitle	Subtitle / EQ
Angle	Info / Angle
Zoom	Zoom / Size
Audio	Audio / Lang I/II
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Preview	Smart / List
Mute	Mute / Dimmer

