 







 




 


 


 




 


 




 

 

 















Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu
	Mute		Mute		EPG		Guide
	1		1		Exit		Exit
	2		2		OK		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		CH+		Ch +
	8		8		CH-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	FAV		Pre Ch		Red		Red
	Recall		Back		Green		Green
	Game		Media		Yellow		Yellow
	Auto		Smart		Blue		Blue
	Info		Info		Zoom		Eject





Original	Rechange	Original	Rechange
Lan/Audio	Dual		
Play	Play		
Pause	Pause		
<<	<<		
>>	>>		
Text	Text		
Tv/Radio	TV/R		
Subtitle	Subt		

