






 





 

 
 


 
 



 



 


 

 

 
 










 



 



 







 


 
 




Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	DTV/VCR		Smart		Rec List		List
	Mute		Mute		Favorite		Pre Ch
	Menu		Menu		Game		Media
	Info		Info		Recall		Back
	EPG		Guide		1		1
	Play		Play		2		2
	Pause		Pause		3		3
	Exit		Exit		4		4
	OK		Ok		5		5
	Up		Up		6		6
	CH+		Ch +		7		7
	CH-		Ch -		8		8
	Down		Down		9		9
	Right		Right		0		0
	Vol+		Vol +		Tv/Radio		TV/R
	Vol-		Vol -		Audio		Dual





Original	Recharge
 Subtitle	 Subt
 Text	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Record	 Rec
 Stop	 Stop
 <<	 <<
 >>	 >>

Original	Recharge

