



Original	Rechange
Power	Power
Tv/AV	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide
Eject	Eject
Play/Pause	Play
Stop	Stop
Return	Back

Original	Rechange
Mute	Mute
Vol+	Vol +
Vol-	Vol -
Up	Up
CH+	Ch +
CH-	Ch -
Down	Down
Right	Right
Left	Left
Sys Menu	Menu
Display	Shift + Info
OK	Ok
Picture	Format
Sound	Dual
Timer	Shift + AV
Nicam/A2	Media
Lan/Prog-	Shift + Ch -





Original	Rechange
PROG+ ZOOM	Zoom/Prog+ SHIFT + + CH Shift + Ch +
SUB	Sub AD SUBT Subt
GOTO	Goto SETTINGS OPT Options
TV/TXT DVB-MENU SET	SET/Tv/TXT/DVB- REPEAT TEXT Text
REVEAL EXIT ANG	ANG/Reveal/Exit CLEAR EXIT Exit
CANCEL TV FORMAT MENU	Menu/Cancel/Tv Format E-MANUAL D.MENU D. Menu
INFO TITLE	Title/info DISPLAY INFO Info
HOLD LANGUAGE <<	<</Hold/Languag << <<
SIZE TEXT >>	>>/Size/Text >> >>
SUBPAGE FAV <<<	I<</Subpage <<< I<<
SUBPAGE FAV <<<	FAV FAV PRE-CH Pre Ch
INDEX EPG >>	>> /Index >> >>
INDEX EPG >>	EPG /-- GUIDE Guide
TV/RADIO PRO	Red/Pro A Red
TV/RADIO PRO	Tv/Radio SEARCH TV/R TV/R
AUDIO SLOW	Green/Slow/Audio B Green
FREEZE REP	Yellow/Rep/Freeze C Yellow

Original	Rechange
SUBTITLE A-B	Blue/A-B/Subtitle D Blue

