


 

























 



 


 
 



 



 



 



 

 

 
 
 
 
 













Original	Rechange	Original	Rechange
 Power	 Power	 List	 List
 Tv/Radio	 TV/R	 Settings	 Shift + Options
 3D	 3D	 Q.View	 Pre Ch
 Guide	 Guide	 Q.Menu/3D	 Media
 Info	 Info	 Up	 Up
 Ratio	 Format	 Mute	 Mute
 Input	 AV	 Down	 Down
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Back	 Back
 5	 5	 FAV	 Smart
 6	 6	 FAV	 Shift + Pre Ch
 7	 7	 Exit	 Exit
 8	 8	 PIP/AD	 Dual
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DUAL
 TV	 SUBT	 OPT	 3D
 DISC NAV LIST	 SOUND	 AD	 ECO
 PROG	 SEARCH	 PICTURE	 FORMAT
 SLEEP	 TV/R	 TIMER	 AV
 E-MANUAL	 REPEAT	 ZOOM	
 D.MENU	 TEXT	 UP	
 TOP MENU	 MENU	 INFO	
 OK	 OK	 OK	
 EXIT	 EXIT	 BACK	
 VOL+	 VOL+	 CH-	
 VOL-	 VOL-	 HOME SMART	
 APP	 MEDIA	 MEDIA	
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
GUIDE	0	PRE-CH	
A	B	C	D
Mandis SHOP			
www.mandis.tv			





Original	Rechange	Original	Rechange
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow/*-		Yellow
	Blue/*+		Blue
	Stop		Stop
	Play		Play
	Pause		Pause
	Subtitle		Subt
	<<		<<
	>>		>>
	Text		Text
	T.Opt		Options

