






















 

 




Original	Rechange
 Power	 Power
 i	 ANGLE INFO Info / Angle
 AUDIO I/II	 LANG I/II AUDIO Audio / Lang I/II
 [...]	 EQ SUBTITLE Subtitle / EQ
 1	 TV 1 1
 2	 DVD 2 2
 3	 CD - STB 3 3
 4	 VIDEO 4 4
 5	 TAPE 5 5
 6	 TUNER 6 6
 7	 AUX - HDD 7 7
 8	 USB 8 8
 9	 BLUETOOTH 9 9
 INPUT SELECT	 RDS AV INPUT AV / Input / RDS
 0	 HDMI - BAT 0 0
 GUIDE (EPG)	 HDMI - BAT GUIDE Guide / EPG / - / -
 MENU	 HOME MENU Menu / Home

Original	Rechange
 Up	 Up
 RETURN	 RETURN BACK Back / Return
 Left	 Left
 ENTER/ CH LIST	 OK
 Right	 Right
 Mute	 DIMMER MUTE Mute / Dimmer
 Down	 Down
 PICTURE SIZE	 FORMAT PICTURE Picture / Format
 Vol +	 Vol +
 FREEZE/[+]	 SHIFT + STEP - FREEZE Shift + Pause / Step /
 P+	 CH PAGE CH+ / Page+
 Vol -	 Vol -
 P+P/[=]/[*]	 PC FAV MARKER Fav / Marker / PC
 P-	 CH PAGE CH- / Page-
 TV	 LIST SMART Smart / List
 MEDIA	 MEDIA DISPLAY Display / Media
 PLAY MODE REC LIST	 TOP MENU D.MENU D. Menu / Top



List

Menu

