






Original	Rechange
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Guide	 Guide / EPG / -/--
 3D	 Eject / Surround
 Ambilight	 Display / Media
 Source	 AV / Input / RDS
 TV	 TV/Radio /
 [<>]/Format	 Picture / Format
 Home	 Menu / Home
 Smart Tv	 Smart / List
 ≡/List	 Shift + Smart / List
 [i]/Info	 Info / Angle

Original	Rechange
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Ill/Options	 Setup / OPT /
 Back	 Back / Return
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original		Rechange		Original		Rechange	
1 . #	1	TV 1	1				
2 ABC	2	DVD 2	2				
DEF 3	3	CD - STB 3	3				
4 GHI	4	VIDEO 4	4				
5 JKL	5	TAPE 5	5				
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
0 _	0	HDMI - SAT 0	0				
TEXT	[≡]/Text	GOTO TEXT	Text / Goto				

