



Original	Rechange
 Power	 Power
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 SDB Tone	 Smart
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 <</Tune-	 <<
 >>/Tune+	 >>
 Analog In	 Red
 Tuner	 Green
 CD	 Yellow

Original	Rechange
 Digital In	 Blue
 iPod/USB	 Media
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Folder Mode	 Back
 Setup	 Options
 Remote/Browse	 Pre Ch
 Repeat	 Text
 Info	 Info
 DAB/RDS	 TV/R
 Program	 D. Menu
 Random	 Subt
 Clear	 Exit
 1	 1





Original		Rechange		Original		Rechange	
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
+10	+10	GUIDE	Guide				
DIMMER	Dimmer	SOUND DUAL	Dual				
CLOCK	Clock	TIMER AV	AV				
SLEEP	Sleep	PROG SLEEP	Sleep				

