

 



 
 
 




 

 
 
 
 

 

 
 

 
 
 


 
 




 
 
 


 

 
 

 
 
 
 
 





	Original	Recharge		Original	Recharge
	Power		Power		Return
	1		1		Shift + Back
	2		2		Options
	3		3		AV
	4		4		Info
	5		5		Guide
	6		6		Red
	7		7		Green
	8		8		Yellow
	9		9		Blue
	0		0		3D
	Text		Text		Format
	Back		Back		TV/R
	Menu		Menu		Up
	Digital		Smart		Down
	Analog		Media		Right
	Theatre		Pre Ch		Left
					Ok



