
 








Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Sleep		Sleep		Vol-		Vol -
	CBL/SAT		1		Eco		3D
	DVD		2		Info		Info
	Blu-ray		3		Option		Options
	Game		4		Back		Back
	AUX		5		Setup		Menu
	Media Player		6		Enter		Ok
	USB		7		Up		Up
	TV Audio		8		Down		Down
	Tuner		9		Right		Right
	Bluetooth		Guide		Left		Left
	Internet Radio		0		Play		Play
	Mute		Pre Ch		Pause		Pause
	CH/Page+		Mute		I<</Tune-		I<<
	CH/Page-		Ch +		>>I/Tune+		>>I
			Ch -		Green/Movie		Green





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Sleep		Sleep		Mute		Mute
	CBL/SAT		1		Back		Back
	DVD		2		Enter		Ok
	Blu-ray		3		Up		Up
	Game		4		Down		Down
	AUX		5		Left		Left
	Media Player		6		Right		Right
	USB		7		Play		Play
	TV Audio		8		Pause		Pause
	Tuner		9		I<</Tune-		I<<
	Bluetooth		Guide		>>I/Tune+		>>I
	Internet Radio		0		Quick Select 1		D. Menu
	CH/Page+		Pre Ch		Quick Select 4		AV
	CH/Page-		Ch +		Quick Select 3		Eject
	Vol+		Ch -		Quick Select 2		Text
			Vol +				

