



 

Original	Rechange
 Power	 Power
 Input TV	 TV/Radio /
 Input Av	 AV / Input / RDS
 Guide	 Guide / EPG / -/--
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [+]/Aspect	 Picture / Format

Original	Rechange
 Link Vieta	 Smart / List
 Option	 Setup / OPT /
 Direct Tv Rec	 Shift + Rec / Rec Mode
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/VCR	 0
 0/VCR	 Shift + 4 / Shift + 4
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+



 

 


Original	Recharge
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 [=]/Text	 Text / Goto
 [=◇]/STTL	 Subtitle / EQ
 [=i]/Index	 Display / Media
 [=+]/Hold	 Shift + Stop /
 Power DVD	 Shift + Power
 Rec DVD	 Rec / Rec Mode
 Programme Down	 Shift + CH- /
 Programme Up	 Shift + CH+ /
 <</I<< DVD	 << / Tune-
 <</I<< DVD	 I<< / Preset-
 >>/>>I DVD	 >>I / Preset+
 >>/>>I DVD	 >> / Tune+
 Stop DVD	 Stop / Hold
 Pause/Step DVD	 Pause / Step / Freeze

Original	Recharge
 Play DVD	 Play / Slow





Original	Recharge	Original	Recharge
 Power DVD	 Power		
 Rec DVD	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 I<< DVD	 I<< / Preset-		
 I<< DVD	 << / Tune-		
 >>I DVD	 >>I / Preset+		
 >>I DVD	 >> / Tune+		
 Stop DVD	 Stop / Hold		
 Pause/Step DVD	 Pause / Step / Freeze		
 Play DVD	 Play / Slow		





Original	Recharge	Original	Recharge
 Power VCR	 Power		
 Rec VCR	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 <</I<< VCR	 I<< / Preset-		
 <</I<< VCR	 << / Tune-		
 >>/>>I VCR	 >> / Tune+		
 >>/>>I VCR	 >>I / Preset+		
 Stop VCR	 Stop / Hold		
 Pause/Step VCR	 Pause / Step / Freeze		
 Play VCR	 Play / Slow		

Original	Recharge

