










 

 

 

 



 

 

 

 

 

 

 




 




 
 

 

 











 

 


 

 




Original	Rechange
 Power	 Power
 Source	 AV
 Sleep	 Sleep
 Picture Mode	 Format
 Sound Mode	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [<>]/Aspect	 3D
 Guide	 Guide

Original	Rechange
 Back	 Back
 Eco	 Shift + 3D
 Menu	 Menu
 i	 Info
 Audio	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Red	 Red
 Green	 Green





Original		Rechange		Original	Rechange
	Yellow		Yellow		
	Blue		Blue		
	Fun-Link		Media		
	[...]		Subt		
	[≡◆]		D. Menu		
	[≡o]		Smart		
	[≡+]		Options		
	[≡]		Text		
	[≡?]		TV/R		
	[≡i]		List		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	>>		>>		
	<<		<<		
	>>		>>		
	<<		<<		

