 


 



 

 




 

 
 




 






 



 











 











Original	Recharge
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 AV Tv	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+ Tv	 Vol+
 0	 0

Original	Recharge
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 I>>	 I>> / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Display	 Display / Media
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Disc Menu	 D.Menu / Top
 Down	 Down



 

 





 





 













 

 












 

 


 
 
 
 
Original	Recharge
 Return	 Back / Return
 O))/Audio	 Audio / Lang I/II
 [...] / Subtitle	 Subtitle / EQ
 Camera/Angle	 Info / Angle
 Zoom	 Zoom / Size
 Title	 Sound / Title
 Program	 TV/Radio /
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Random	 Blue / Prime Video / Random

Original	Recharge





Original	Rechange
 Power	 Power
 Eject	 Eject / Surround
 AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/VCR	 TV/Radio /
 0	 0
 <<	 << / Tune-
 >>	 >> / Tune+
 Pause/Step	 Pause / Step / Freeze

Original	Rechange
 Play	 Play / Slow
 Stop	 Stop / Hold
 CLK/CNT	 Display / Media
 Up	 Up
 PR/TRK+	 CH+ / Page+
 i	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 PR/TRK-	 CH- / Page-
 Down	 Down
 O)))/Audio	 Audio / Lang I/II
 Rec/ITR	 Rec / Rec Mode
 Lock	 Back / Return
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat





	Original	Recharge	Original	Recharge
A - B LP		FORMAT PICTURE		Picture / Format
RANDOM CM SKIP	CM Skip	LIST SMART		Smart / List

